
 


PROTECTIVE FENCE INSTALLATION INSTRUCTIONS

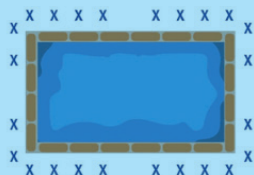

PLAN

Plan your installation, measure and mark the layout on the ground where you are going to place the fence, marking the position of each post with an X.



LAYOUT

Leave a gap of 1 metre between the posts in the same section and 6 centimetres between the last post in one section and the first in the next one (all measurements take the centre of the post as a reference).

To install at an angle it is necessary to coincide the end of the section with the beginning of another, so in each corner we will always have 2 posts.




DRILL

Once you've got it all ready, start drilling. Slightly tilt the end posts of each section outwards for perfect tension.




FILLING

Fill each hole with resin or chemical anchor, insert the plastic sleeves and let them dry.

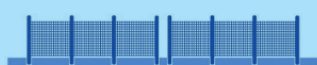


ASSEMBLY

Assemble the fence section by section, making sure everything fits together correctly.

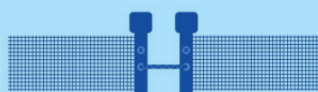

LATCHES

Place the safety latches to join the sections using the hole left by the second screw at the top.

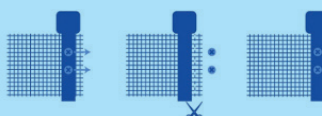

TENSION

If necessary, adjust the tension of the fence by correcting the length of the mesh in each section: Remove the screws holding the metal plate from the post and remove it. Cut off the remaining part of the mesh, fold the end and screw the metal plate back on.



ACCESS

Facilitates entry by installing an safety gate or access the pool through a meeting point between two sections: bring the two posts together and open the safety latch.


GATE INSTALLATION INSTRUCTIONS



PLAN


Plan your installation by choosing the most common access area to your pool for your gate, measure and mark the layout of your safety fence on the ground.

We recommend that for best results you should not install the gate on a corner or angle.

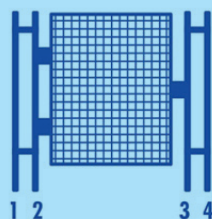

DOUBLE POSTS

Remember that the gate has a double-post structure on both sides to ensure better safety, which means that a total of four holes will be required.

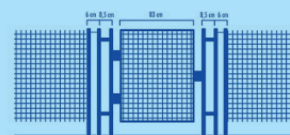


LAYOUT

Leave a gap of 6 cm between the last fence post and the first gate post, 8.5 cm between the double posts and an 83 cm space for the gate between the internal posts.




DRILL

Make the holes and fill them with resin or chemical anchor, place the plastic sleeves and let them dry.

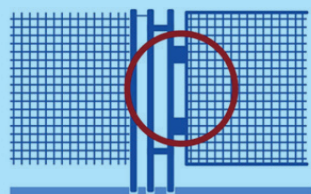


ASSEMBLY

Assemble the double posts and place the 2 hinges to join the inner post to the gate panel (following the instructions that come with it).

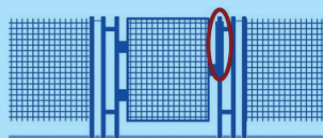


LOCK

Install the safety lock according to the instructions that come with it.

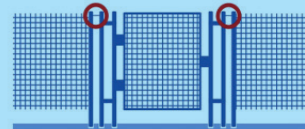

LATCHES

Place the safety latches to join the end of the fence section to the outer post of each double post using the hole left by the second screw at the top.

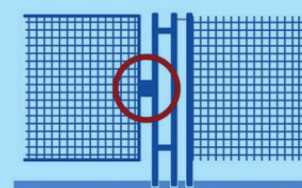

ADJUSTMENT

Adjust the safety catch to the required height and your safety gate is ready.