

INSTALLATION

1. Input voltage is AC12V. The lamps must be connected with transformer.
2. The junction box is located at least 1200mm from the edge of the pool.


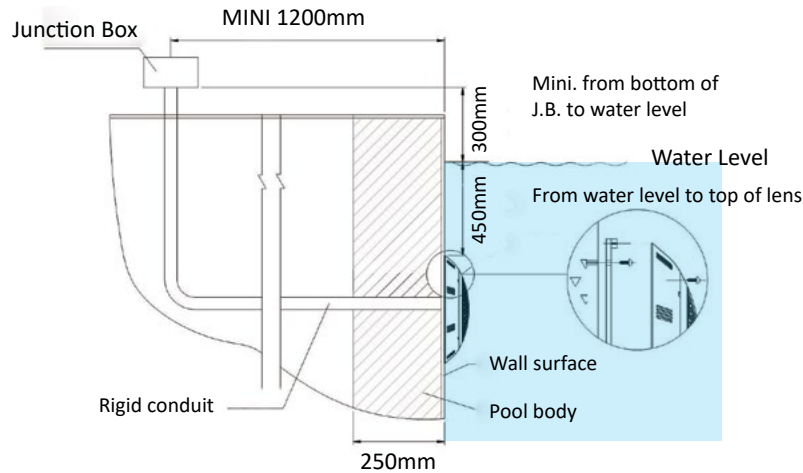 


Figure 1

 3. The mounting bracket must be properly installed so that the top edge of the light's lens is at least 450mm below the water level in the pool. see Figure 1.
4. Make sure the surface of pool wall is flat.




5. If the cable connection is done underwater, the connection part must be **waterproof protected** (use waterproof cable gland or fill with epoxy glue). Otherwise, the water will come in the lamp through the wires.

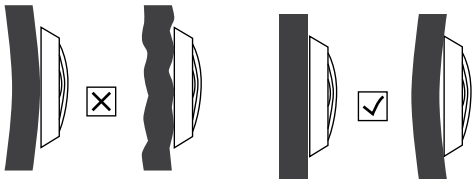

6. Connect all wires to the corresponding circuit wires in the junction box and feed epoxy.
7. Before operating the light for more than 10 seconds fill pool until the light is completely submerged in water.
8. There are 3 wires for RGB with remote control. Connecting the signal wire out of water, enhancing the ability of signal receiving.



 9. It is easy to replace the lamp.

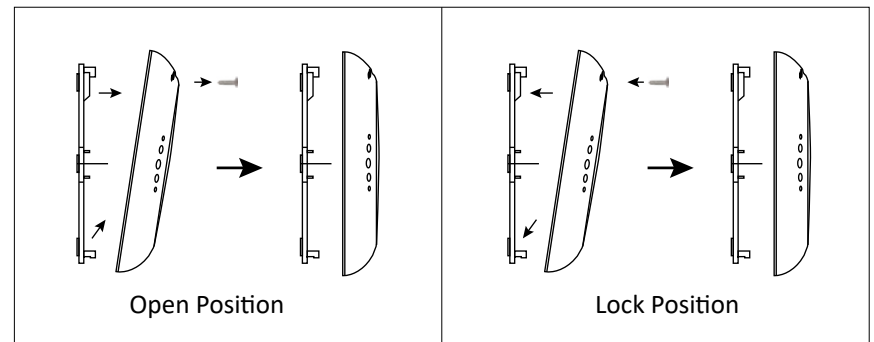

ACQUA SOURCE S.A.

Manufacturer of swimming pool and fountain products

15 Souri str., 121 31 Peristeri, Athens, Greece Tel. & Fax: +30 210 5721058, +30 210 5771863, +30 210 5774345 E-mail: info@acquasource.gr